


Using Your 7900 Pager

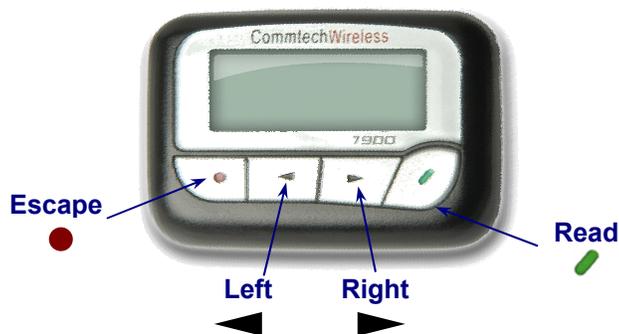

To Install A Battery

1. Slide up the battery compartment lock on the pager case.
2. Remove the battery compartment cover by sliding it toward the marked arrow.
3. Observing +/- battery polarity, install a fresh alkaline AA battery.
4. Replace and lock the battery compartment cover.

To Turn the Pager ON

1. Press and hold the Read Key. The pager will beep and/or vibrate and the screen will activate, the pager will display a start-up message (e.g. the agency name) followed by the STANDBY SCREEN that displays the date and time.
2. After a short amount of inactivity, the pager screen will blank, except for the Power icon in the bottom left corner. You can return to the STANDBY SCREEN at anytime by pressing any of key.

The 7900 Pager contains a backlit, two line, alphanumeric LCD screen. Each line is 18 characters long. There is also a row of small icons which give a quick indication of the current status and settings of the pager.

Icon	Description
	Vibrate Alert
	Beeping Alert
	Daily Alarm On
	Unread Message
	Message Locked
	Low Battery
	Message continues on next screen

To enter the Settings Menu:

1. Press any key to go to the STANDBY SCREEN.
2. Press and hold the Escape Key to open the SETTINGS Menu. The available SETTINGS Menu functions include Alert Settings, Power Off, Daily Alarm Settings and Date & Time Settings. Use the & Arrow Keys to scroll through the different functions.

❖ NOTE: Press the Escape Key at any time to return to the STANDBY SCREEN without saving any changes.

Alert Settings

This menu item is used to set how the pager behaves when it receives a message.

1. Press any key to go to the STANDBY SCREEN.
2. Press and hold the Escape Key to open the SETTINGS Menu.
3. Using the & Arrow Keys, scroll to the Alert Set icon.
4. Press the Read Key to select Alert Set.
5. Use the & Arrow Keys to select the alert types. These are (from left-right) Tone, Vibrate, Tone & Vibrate and Mute. The pager will demonstrate each alert type as you scroll through them.
6. Press the Read Key to confirm the selection.

Power Off

1. Press any key to go to the STANDBY SCREEN.
2. Press and hold the Escape Key until the SETTINGS Menu.
3. Using the & Arrow Keys, scroll to the off icon.
4. Press the Read Key two times.

Daily Alarm Settings

This menu item is used to set the daily alarms. The pager can have up to five alarms set.

1. Press any key to go to the STANDBY SCREEN.
2. Press and hold the Escape Key to open the SETTINGS Menu.
3. Using the & Arrow Keys, scroll to the Set Alarm icon.
4. Press the Read Key to select the Set Alarm function.
5. Use the & Arrow Keys, to scroll through the five types of alarms available. They are All Days, Weekday, Holiday, Special Day 1 and Special Day 2.
6. Press the Read Key to confirm selection of the desired alarm type.
7. The first field within this screen is the Alarm Active icon. Press the & arrow keys to toggle between Alarm Active and Alarm Disabled for the current alarm.

❖ NOTE: ability to disable each daily alarm is useful, as it enables you to configure an alarm ready for use at any time, but not have it actually activated.

8. Press the Read Key to move to the time setting field. Use the & Arrow Keys to adjust the settings, and the Read Key to move to the next field.
9. Once the time is set, press the Read Key, the pager will beep and you will be returned to the STANDBY SCREEN where the Daily Alarm icon will appear on the LCD if you have any active alarms.

Date and Time Settings

1. Press any key to go to the STANDBY SCREEN.
2. Press and hold the Escape Key to open the SETTINGS Menu. Using the & Arrow Keys, scroll to the Date & Time icon.
3. Press the Read Key to select Date and Time.
4. Use the & Arrow Keys to adjust the settings and the Read Key to move to the next field.
5. Press the Read Key until it reaches the end of the line. The pager will beep and the information will be automatically saved.
6. You will then be returned to the STANDBY SCREEN.

Receiving a New Message

1. When a page is received, the pager will alert with Tone or Vibrate, depending on the pager's current alert settings.
 2. The Erie County Alerting Tones are:
 - A: County Wide All Call (BEE...BOP)
 - B. Emergency / Speed UP (Bip... Beep and Vibrate)
 - C. Stand Down (4 beeps)
 - D. Admin/Personal (3 beeps)
- ❖ **NOTE: EMERGENCY/SPEED UP calls will always play a tone and Vibrate even if the pager is set to Vibrate or Mute. County Wide calls will always play a tone.**
3. To stop the pager from alerting you about the received page, press any key.
 4. The received page will be shown on the LCD screen.
 5. When you have finished reading the message, press the ● *Escape Key* to return to the STANDBY SCREEN.
- ❖ **NOTE: The  Unread Message icon appears whenever there are stored messages in the pager that have not been read. A reminder alert will alert every 30 seconds until message is read. Press the  Read Key to view any unread messages.**
- ❖ **NOTE: If a message is longer than the screen width, the  icon will be displayed. To view the rest of the message press the  Read Key.**

Reading a Stored Message

1. Press any key to go to the STANDBY SCREEN.
2. Press the  Read Key to display the list of messages.
3. Use the ◀ & ▶ Arrow Keys to scroll through all stored messages. You will see the message number in brackets followed by the Address Code (1-6) and Priority (A-D) it was sent with.
4. Press the  Read Key to display the message.
5. Press the  Read Key again to display The Time Stamp that at the end of each message to show the time, date and address properties of the message.

Deleting Individual Messages

1. While the message you wish to delete is being displayed, press and hold the ● *Escape Key* to display the DELETE Menu.
 2. Using the ◀ & ▶ Arrow Keys, scroll through the menu until  Delete is found.
- ❖ **NOTE: The ● Escape Key can be pressed while in the DELETE Menu to return you to the STANDBY SCREEN without deleting any messages.**
3. Press the  Read Key to confirm deletion of this message.

Deleting All Messages

1. While a message you wish to delete is being displayed, press and hold the ● *Escape Key* to display the DELETE Menu.

2. Using the ◀ & ▶ Arrow Keys, scroll through the menu until  Delete All is found.

❖ **NOTE: The ● Escape Key can be pressed while in the DELETE Menu to return you to the STANDBY SCREEN without deleting any messages.**

3. Press the  Read Key to confirm deletion of all messages.

Protecting a Message

Protecting a message is used when you wish to prevent a message from being deleted.

1. While the message is being displayed, press and hold the ● *Escape Key* to display the DELETE Menu.
2. Using the ◀ & ▶ Arrow Keys, scroll through the menu until  Protect is found.

❖ **NOTE: The ● Escape Key can be pressed while in the DELETE Menu to return you to the STANDBY SCREEN without protecting any messages.**

3. Press the  Read Key to confirm your choice. The  Message Locked icon will appear on the LCD screen to confirm the message is locked. Press the ● *Escape Key* to return to the STANDBY SCREEN.

Un-protecting a Message

1. While the protected message is being displayed, press and hold the ● *Escape Key* to display the DELETE Menu.
2. Using the ◀ & ▶ Arrow Keys, scroll through the menu until  Unprotect is found.
3. Press the  Read Key to confirm your choice. The  Message Locked icon will disappear from the LCD screen to confirm the message is now unlocked. Press the ● *Escape Key* to return to the STANDBY SCREEN.

❖ **NOTE: The ● Escape Key can be pressed while in the DELETE Menu to return you to the STANDBY SCREEN without un-protecting any messages.**

To Replace the Battery

The pager will warn you when the battery is getting low with the  Battery Low icon on the screen and an audible "chirp" every 30 seconds.

1. Turn off the pager.
2. Unlock and Remove the battery compartment cover by sliding it toward the marked arrow.
3. Remove the exhausted battery and while observing +/- battery polarity, install a fresh single alkaline AA battery.
4. Replace and lock the battery compartment cover.
5. Replace the battery within 10 seconds to avoid losing stored messages and the date and time. Programming (such as the welcome message and Capcodes) will not be lost, even if the battery is out for a long period of time.



Erie County Department of Emergency Services

Erie County Public Safety Campus

45 Elm Street - Buffalo, NY 14203

Email Alert@erie.gov - Phone: 716-858-4827 - Fax: 716-858-7937